

Quick Start



Installing the micro-SIM Card and Battery

Power off your phone before installing or replacing the battery or micro-SIM card.


① Remove the back cover as shown.

② Press the black spot and insert the micro-SIM card into the card slot with the cut corner oriented as shown.

③ Insert the microSDHC (sold separately) with the gold-colored contacts facing down.

④ Carefully insert the battery with the contacts located against the metal springs. Push down on the battery until it is fully seated.

⑤ Replace the back cover.


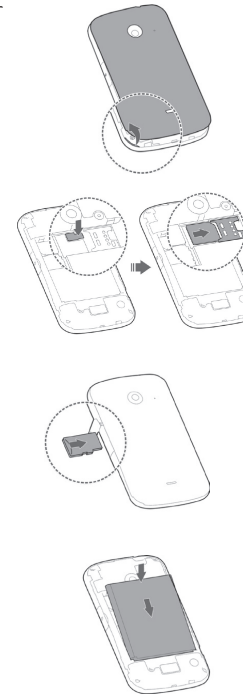


Touch Screen and Navigation

Your phone features a capacitive touch screen, so you can gently tap, quickly swipe, or pinch with two fingers to navigate.

Navigating Your Phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or a gallery image.
- The Notifications bar at the top of the screen provides quick access to alerts including new messages, email, and voicemail. Swipe down on the black bar to see more details.
- To return to the previous screen, press .
- Press to return to the main home screen. Press and hold to access Google Now™.
- Press to access menu options for the screen you are on.
- Tap to access applications on your phone.

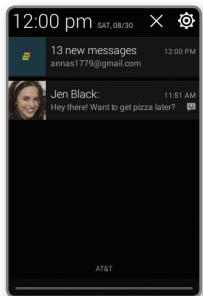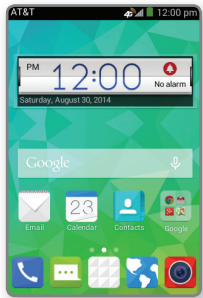

GoPhone Account

Auto Refill

Take the hassle out of refilling your account by enrolling in Auto Refill.

From Your Device

- ① Call 611 from your phone.
- ② From the main menu, say "More options," and then say, "Set up auto pay."

Online

- ① Visit att.com/mygophone.
- ② Under Auto Refill, select **Sign Up > Manage My Account > Auto Refill**.

Add Money with a Credit Card, Debit Card, or Checking Account

- ① Call 611 from your phone and say, "Add money."
- ② Go to att.com/mygophone and select the **Credit Card Payment** link.

Add Money by Purchasing a GoPhone Refill Card

Add money by purchasing a GoPhone Refill Card, which is available at authorized retail locations nationwide. With most refill cards, you can add the value directly from your phone.

- ① Dial 611 from your phone and say "Add money."
- ② Enter ***888***, followed by your PIN number, the **# key**, and then press **Send**.
- ③ Go to att.com/mygophone and select the **Refill** link.

Camera and Video Recording

Take pictures and record videos right from your phone with the camera and camcorder and then share them with friends and family.

Take a Picture


- ① From the home screen, tap .
- ② Tap to adjust your camera settings. Zoom in and out by pressing the volume key.
- ③ Tap to take a photo.

Record a Video

- ① From the home screen, tap .
- ② Tap to start and tap to stop recording video.

Share a Picture or Video

- ① From the home screen, tap > .
- ② Tap an album and then tap a photo or video. Tap **Share** and select an option for sharing.

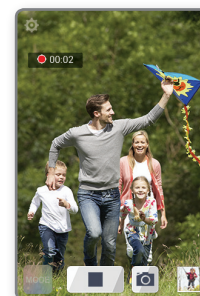

Contacts and Phone Calls

Keep the contact information of your favorite people in the address book. Call friends and family and check voicemail in just a few simple steps.

Import Contacts from SIM card

- ① From the home screen, tap .
- ② Press > **Import/Export > Import from SIM card**.
- ③ Tap > **Export to phone**.
- ④ Tap the contacts you want to import and then tap **Done**.

Edit a Contact

- ① From the home screen, tap .
- ② Tap a contact name, then tap **Edit**.
- ③ Change details as needed and tap **DONE**.

Make a Call

- ① From the home screen, tap .
- ② Tap the **Search** field to search for a contact or phone number, or tap and enter a phone number.
- ③ Tap the contact name or tap to place the call.

Check Voicemail


- ① From the home screen, tap .
- ② Tap .
- ③ Press and hold the **1 Key**.
- ④ Follow voice prompts to listen to messages.

Text and Picture Messaging

Send text or picture messages to communicate privately and quickly.


Send a Text Message

- 1 From the home screen, tap .
- 2 Tap  to start a new text message.
- 3 In the **To** field, enter a number or a contact name, or tap  to access your contacts.
- 4 Tap the **Type message** field and enter your message.
- 5 Tap  to send the message.

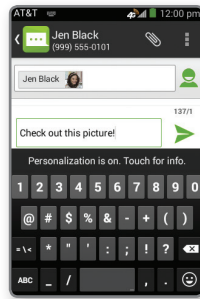

Send a Picture Message

- 1 Follow steps 1-4 above.
- 2 Tap .
- 3 Tap **Pictures** and select desired picture.
- 4 Tap  to send the message.

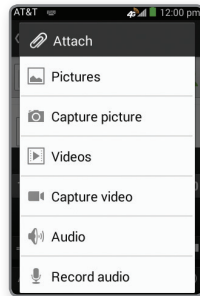


Please don't text and drive.

Bluetooth® and Wi-Fi®

Pair with other *Bluetooth* devices or connect to a Wi-Fi network.


Connect to a Bluetooth Headset

- 1 From the home screen, press  and tap **System settings > Bluetooth**.
- 2 Tap  to turn *Bluetooth* on.
- 3 Tap **SEARCH FOR DEVICES**.
- 4 Tap the name of the device to pair and connect with it.

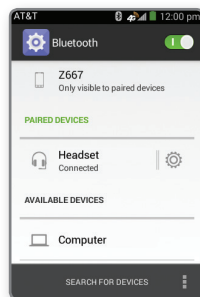

Connect to Wi-Fi Network

- 1 From the home screen, press  and tap **System settings > Wi-Fi**.
- 2 If Wi-Fi is off, tap  to enable it.
- 3 Tap a network name. Enter a password if required and then tap **Connect**.

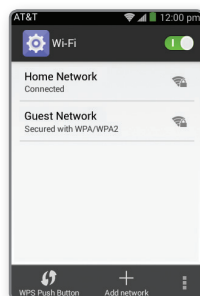


Email

Access your Gmail™, corporate email, and personal email wherever you are!


Email Setup

- 1 From the home screen, tap .
- 2 Select an email server and then enter your email address and password and tap **Next**.
- 3 Confirm email account settings and tap **Next**.
- 4 Name the account, enter your name as it will appear on outgoing messages, and tap **Next**. Your email will begin to synchronize with your phone.

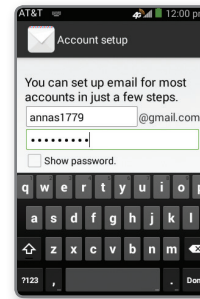

Create and Send an Email

- 1 From your email inbox, tap .
- 2 Enter an email address or tap  to access your contacts list.
- 3 Enter a subject and email message. To attach files to the email message, tap  > **Attach file**, and make your selection.
- 4 Tap **Send** to send your message.

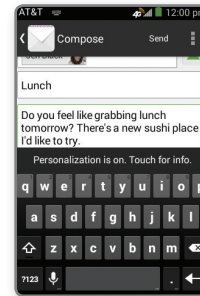

Note: To set up corporate email, contact your IT administrator.

AT&T Services

Check out these handy apps from AT&T.

-  **AT&T Drive Mode™**: Silence notifications, set an auto-reply so people will know you're driving, and more.
-  **AT&T Locker™**: Safely store and share all your photos, videos, and documents with up to 5 GB of free storage.
-  **AT&T Navigator®**: Get voice-guided, turn-by-turn driving directions and traffic updates.
-  **MobileTV**: Watch LIVE, on-demand, and downloadable mobile TV.
-  **AT&T Usage Manager**: You can track how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.

Data rates may apply. Mobile TV and AT&T Navigator require a separate subscription. Mobile TV requires mobile broadband service. Service not available in all areas. Programming subject to blackout restrictions. Download and watch capability available for select content, requires Wi-Fi connection, and is available for viewing for limited time periods.

Network Indicators

Your 4G wireless device will indicate which of the AT&T wireless networks you are connected to. A network indicator does not necessarily mean that you will experience any particular upload or download data speeds.

-  **4G**: Connected to the AT&T HSPA+ network. The AT&T HSPA+ network is capable of delivering 4G speeds when combined with enhanced backhaul. 4G availability is increasing with ongoing backhaul deployment.
-  **3G**: Connected to AT&T's 3G network.
-  **Edge**: Connected to the AT&T EDGE/2G network.

Actual data upload and download speeds depend on various factors, including the device, network utilization, file characteristics, terrain, etc. Learn more at: wireless.att.com/learn/articles-resources/wireless-terms.jsp, your AT&T Wireless Customer Agreement, Section 3.2 "Where and How Does AT&T Service Work?" The AT&T HSPA+ network can deliver 4G speeds when combined with enhanced backhaul. Your wireless device can't distinguish between HSPA+ cell sites with enhanced backhaul and those without. Enhanced backhaul not available everywhere. Learn more at att.com/network.

4G speeds delivered by HSPA+ with enhanced backhaul, where available. Deployment ongoing. Compatible device and data plan required.

Find More Information

On the Web

- Find tutorials at att.com/Tutorials.
- Find device specifications, user manuals, troubleshooting, and user forums at att.com/DeviceSupport.
- Manage your wireless account, including suspending service if your phone is stolen, at att.com/myatt.
- View the User Guide at www.zteusa.com/zte-z667.html#manual.

Give us a call

- Call AT&T Customer Care at **1-800-331-0500** or dial **611** from any AT&T mobile phone for assistance with your service or device.

microSDHC logo is a trademark of SD, 3C-LLC. Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission. The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc.

© 2014 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks contained herein are the property of their respective owners.

Printed in China